

# instant FOUNDATION LOW PROFILE

## HARDWARE

### 1 - Center Brace

(Not Included in Twin + Twin XL Sizes)



### 2 - Head/Foot Braces



### 2 - Notched Side Braces



### 10 - Wood Slats



### 6 - Bolts



### 1 - Wrench



### 6 - Nuts




### 30 - Wood Screws



### 1 - Foundation Cover




## FOUNDATION ASSEMBLY INSTRUCTIONS

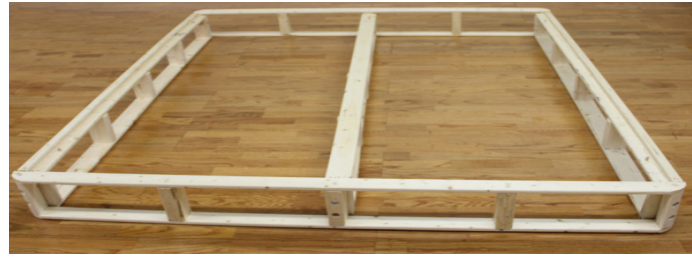

### ASSEMBLE THE FOUNDATION

- 1) Fasten one end of the side brace and foot brace together by hand, using bolts and nuts.
- 2) Fasten the center side brace by hand to the foot brace, repeat with the third brace.
- 3) Repeat steps "1" and "2", fastening all three side braces to the head brace by hand.
- 4) When completely assembled, tighten all nuts with the enclosed wrench.

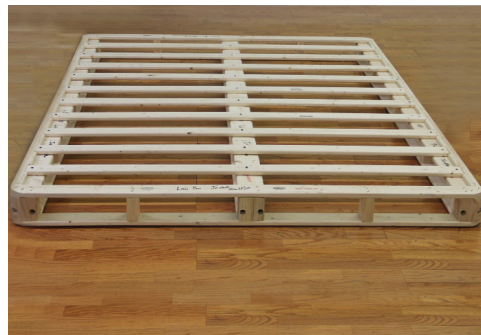

### ADD THE BED SLATS

- 1) Place the bed slats into the notched area on the sides of the foundation.
- 2) Screw end slats down using the enclosed wood screws. Screwdriver not included.



### ADD THE COVER

- 1) Unfold the cover and place over wood foundation.
- 2) Cover fits tightly over the wood foundation.
- 3) Pull the drawstring to tighten the cover and slide the locking ball in place.

- TWIN
- TWIN XL
- FULL
- FULL XL
- QUEEN
- KING
- CAL KING